


Warning! Do not remove or install the Base Station or Remote Transmitter batteries in an area where flammable or explosive vapors are present.

Install the Base Station and Remote Transmitter batteries in the order below to ensure proper operation

Base Station (Indoor Unit) Battery Installation

1. Remove the battery cover and install 2 AAA batteries in the orientation indicated.
2. Replace the battery cover. The display will flash 5%. If the display does not flash 5%, verify the battery orientation.

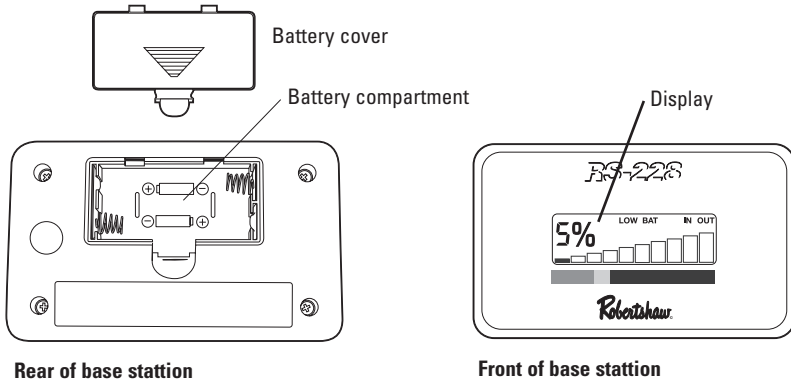

Remote Transmitter (Outdoor Unit) Battery Installation

1. Place the Remote Transmitter within 3' of the Base Station.
2. Loosen the four (4) battery cover screws until you can remove the battery door. It is not necessary to completely remove the screws.
3. Set the Horizontal/Vertical switch located in the battery compartment to match your tank type
4. Install 2 AA batteries in the orientation indicated.
5. Replace the cover making sure the battery door gasket is in place. Tighten all four (4) screws until snug.

The Base Station will display approximately 50% within one (1) minute after the remote transmitter batteries are installed.

NOTE: Do not move either unit for 10 minutes after battery installation is complete to assure full radio synchronization.




If the Base Station continues to flash 5% after one (1) minute has elapsed, the radio synchronization process did not initiate. Repeat the battery installation procedures.

Continued on reverse side

Synchronization Procedure

1. Remove the batteries from both the Base Station and the Remote Transmitter. Wait 10 minutes.
2. Repeat the Base Station Battery Installation and Remote Transmitter Battery Installation starting with the Base Station.

NOTE: If the base station or remote transmitter batteries are removed for more than one minute at any time, the complete synchronization procedure must be repeated.

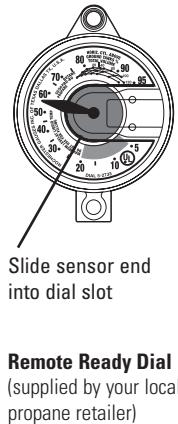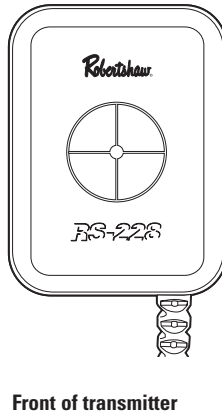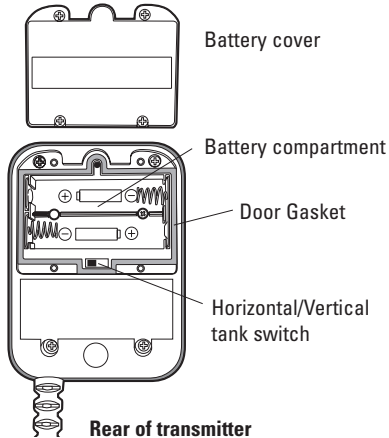

System Installation

1. Mount the Remote Transmitter on top of the tank or on the side of the tank facing the base station. Use the supplied Remote Transmitter mounting bracket to facilitate installation.
2. Slide the Remote Transmitter sensor into the tank's Remote Ready Dial until it snaps into place. Contact your propane retailer if your tank does not have a Remote Ready Dial
3. Select a Base Station location within 150 feet (50 meters) of the tank. The construction of your home or office may affect the transmission range between the Base Station and the Remote Transmitter. Select the location that provides the best performance.

NOTE: If the base station begins flashing 5% after installation is complete, radio contact with the remote transmitter has been lost. Relocate the base station to achieve a stronger radio signal. Remove and replace the base station batteries to establish radio contact. Do not leave the batteries out more than one minute or synchronization will be lost and the synchronization procedure will have to be repeated.